


S1050

ASSEMBLY & INSTALLATION GUIDE

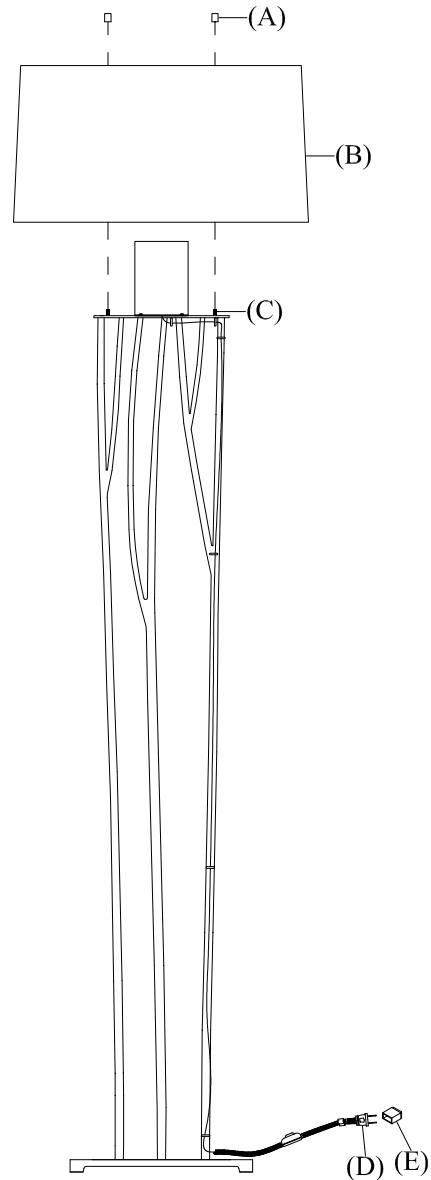

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove lock nuts (A) from bolts (C) attached on top of lamp base, place lamp shade (B) over both bolts (C). Screw lock nuts (A) onto the bolts to secure lamp shade to lamp base.
2. Insert light bulbs Type A, maximum 60 watt or 13 watt CFL bulbs into sockets.
3. Remove plastic cover (E) from electrical plug (D).
4. Plug lamp into wall outlet.