




ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0271

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

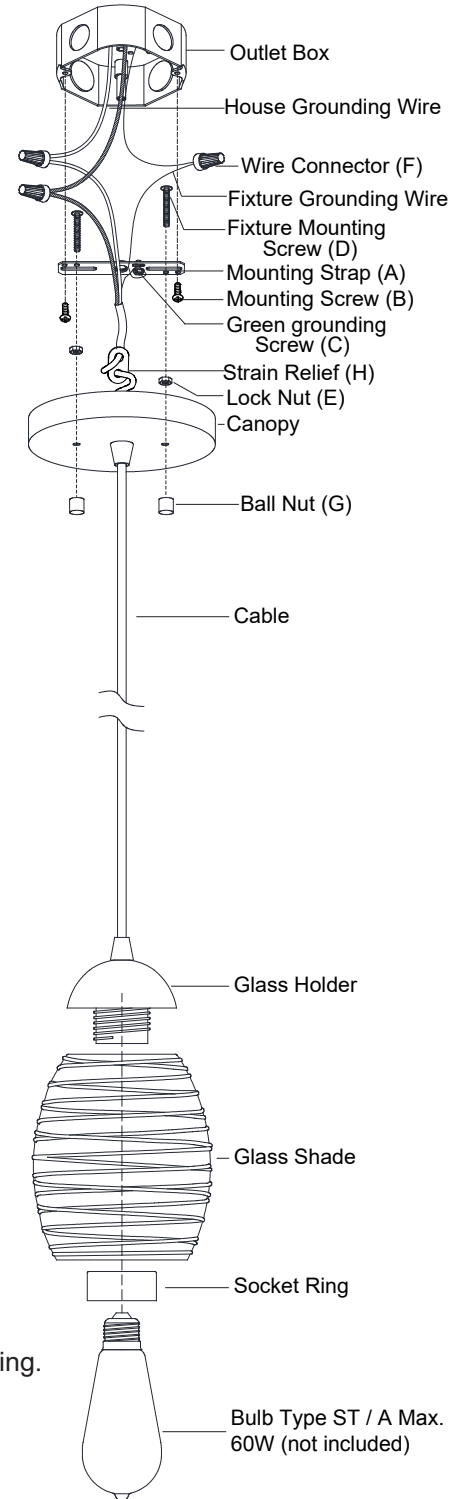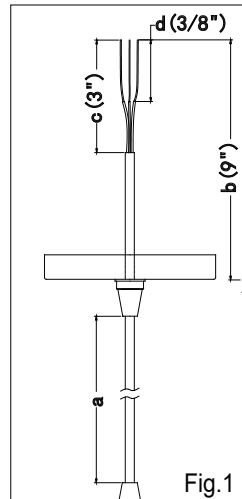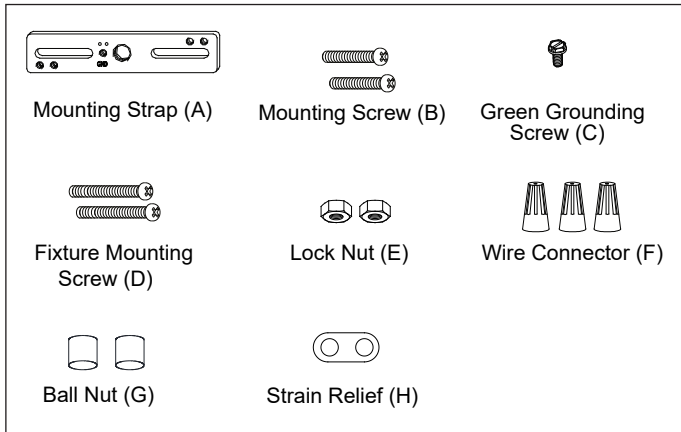

Installation Steps

Turn off the power at fuse or circuit box.

1. Thread two fixture mounting screws (D) to the mounting strap (A), then secure them with two lock nuts (E)
2. Adjust the length of cord with strain relief(H) to achieve the desired height.
3. Depending on the desired height of light fixture, you may need to cut the excess wire. You will need at least 9 inches of wire to work with. Prepare wire by stripping 3/8 in of insulation from wire ends using wire strippers (not included).
4. Attach the mounting strap (A) to outlet box by using two mounting screws (B).
5. --Connect the L wire from the fixture to the black wire from the power source.
--Connect the N wire from the fixture to the black wire from the power source.
--Connect the BARE/GREEN ground wire from outlet box to BARE wire from fixture using wire connector.
--Carefully put the wires back into the outlet box.
6. Attach the fixture canopy to the mounting strap (A) by inserting the fixture mounting screw (D), and then secure it with two ball nuts (G).
7. Attach the glass shade onto the socket and tighten the glass shade with socket ring.
8. Install 1 X 60W max medium base bulb (not included) to the socket.









VAXCEL

181120


Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.


Spare Parts List:

 Mounting Strap (A)	 Mounting Screw (B)	 Green Grounding Screw (C)	 Fixture Mounting Screw (D)
 Lock Nut (E)	 Wire Connector (F)	 Ball Nut (G)	 Strain Relief (H)

Assembly Kit 5975MM (1SET)



Glass Shade 10023CT (1PC)

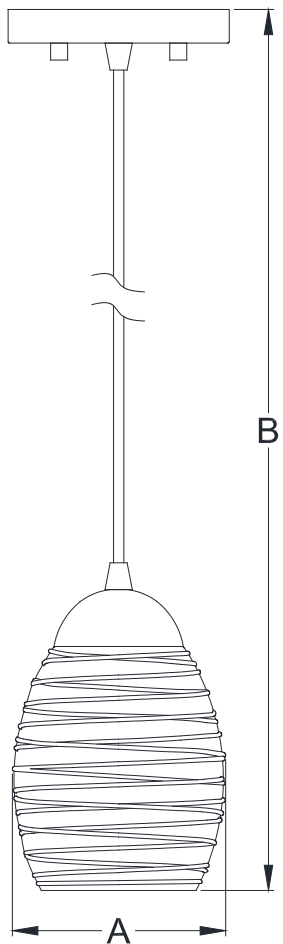

A: 4-7/8"

B: 145-1/2"